


# TRULINE<sup>®</sup>

The Innovative Hybrid Sheet Piling System

**Drawing 109**  
basic 90 degree corner/return

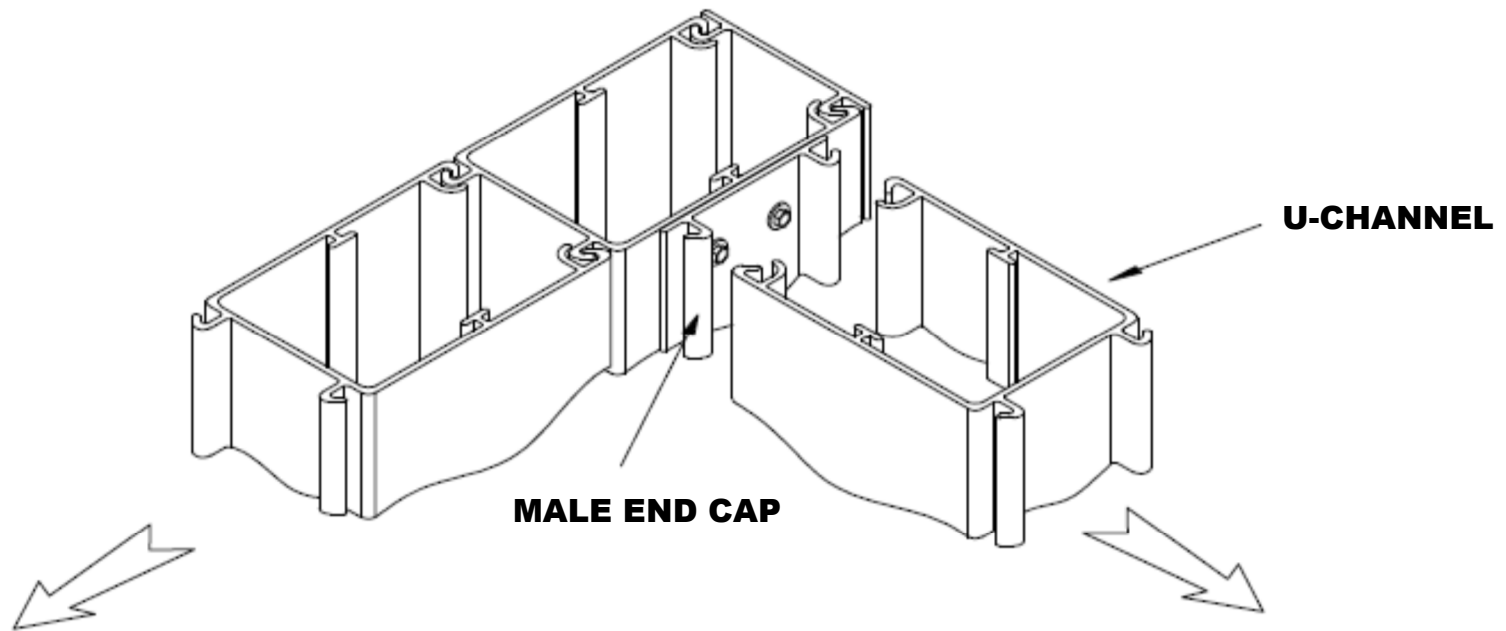

**To create a 90 degree corner/ return anywhere on the wall, simply pre-attach a male end cap to the u-channel face with stainless steel bolts, nut and flat washers on 24" centers prior to driving the u-channel. You can then begin driving u-channel parts starting on this end cap as shown.**